

MEM-9907
MEMPHIS FATS/SLIM MOUNTING KIT
SUZUKI VZ800V MARAUDER 97-2002

**TOOLS REQUIRED: 3/16" ALLEN WRENCH (PROVIDED)
7/16" (OR 7MM) ALLEN WRENCH**

1. Loosely install the two mounting plates on the windshield, using the bottom and third bolt up. Leave the nylon washers off. The small tab goes at the bottom, big one at the top. (See Figure 1-for reference only, tabs must point in towards center)

Install Note: *(Wide) – Tabs point out towards edge of windshield when installed correctly.

2. Install the four fork clamps, approximately 1.75 inches apart. Tighten them, and then loosen them. (See Figure 2)
3. Loosen the four bolts that are to hold the windshield to the fork clamps, and slide the mounting plates onto the forks. (See Figure 3)
4. Adjust the height, angle, and alignment of the shield and tighten down the bolts that hold the windshield to the plates, then the bolts that hold the plates to the fork clamps, then the clamps themselves.

WARNING: This is a quick disconnect kit. Always tighten down all mounting bolts after removing or installing the windshield, every time.

FRONT OF BIKE



FIGURE 1



FIGURE 2

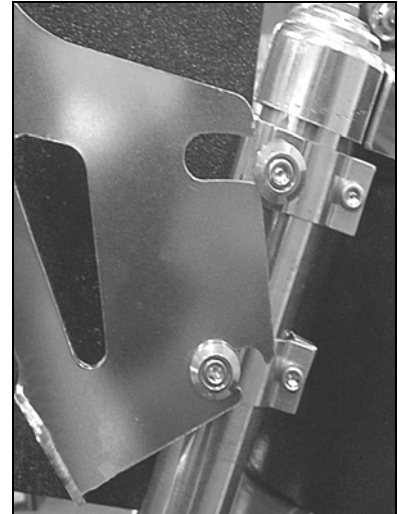


FIGURE 3

Care and Cleaning

To clean your windshield, use only warm water and a mild non-abrasive, dishwashing liquid. Use a soft cloth such as a T-shirt or flannel cloth. To protect your windshield use NOVUS #2 to remove minor scratches, or use a polish specifically designed for plastic, glass. Cleansing agents will cause severe damage to your windshield. Never use any glass products. Never use any Petroleum based chemicals, or cleaning agents with ammonia. This includes Rain-X, brake fluid, acetone, and gasoline.

**MEM-9907 MOUNTING KIT
MEMPHIS FATS/SLIMS FOR MARAUDER**

PART #	DESCRIPTION	QTY.
M907	Mounting Instructions/Parts List	1
M538	Left Mounting Plate Fats/Slims	1
M539	Right Mounting Plate Fats/Slims	1
M301	1/4"-20 x 3/8" SS Socket Head Cap Screw	4
S1115	Large Adjustable Clamp Assy. With 1/8" Spacer	4
M310	3/16" Short Arm Allen Wrench	1
M313	3/16" Allen Wrench Cover	1
M314	3/16" T-Handle Allen Wrench	1
M337	3/16" T-Handle Allen Wrench Cover	1

**Memphis Shades warrants all product components, metal and plastic,
against defects in materials and workmanship for 24 months.**

FOR PARTS AND WARRANTY HELP, CONTACT:

MEMPHIS SHADES
P. O. Box 429
Rossville, TN 38066
(901) 853-0293

Visit us on the web at www.memphisshades.com or
you can also reach us at
customerservice@memphisshades.com

MEM9907 03-09-09
